 


BOOKLET OF SERVICE UNDER GUARANTEE



CONDITIONS OF GUARANTEE

Terms of the guarantee

ISO-Rivolta cars are guaranteed against possible defects of materials and work-manship, under normal conditions of use and service.

The guarantee is valid for six months or up to 10000 Km - 6000 Miles, whichever is first. It commences from the date of delivery of the vehicle and is valid only in respect of the first owner who has purchased the vehicle from an authorised sales agent.

The guaranted does not cover tyres, battery, the carburettor, instruments and some other units not manufactured by the factory.

The guarantee obligation assumed by ISO is limited to the replacement or the repair, ex-works, of parts which are recognised as defective in material or work-manship in the opinion of the technical department of ISO, this opinion being incontestable. The labour costs for disassembling and re-assembly, transport and any on-the-spot inspections, are on the account of the owner of the vehicle.

Cancellation of the guarantee

The guarantee on the part of the manufacturer is no longer valid:

- in the event of change of ownership of the vehicle.
- if the defects or the damage discovered are caused by negligence in the standard of maintenance or misure of the vehicle.
- If repairs or modifications are carried out other than in workshops authorised by the manufacturer, such a way as to prejudice the working life or the strength of any part.
- if the vehicle has taken part in sporting contests or has been used for purposes different from those for which it is intended.

Responsibility

The manufacturers consider themselves free from any responsibility for possible injuries to persons or things deriving from the use or the possession of ISO-Rivolta vehicles.

Moreover, the manfacturers shall not be liable for any damage arising from breaking-in, theft, fire or other cases of « force majeure » which may affect the vehicle or the property of the customer on the premises of ISO or in the workshops of authorised sales agents.

The manufacturers reserve the right to carry out without previous notice any modification or improvement of their products, without this constituting a duty to make the same modifications to previously manufactured vehicles.

The performance data supplied are purely indicative and are not formally binding.

DELIVERY CONFIRMATION SLIP

FOR THE ISO RIVOLTA G.T.

Type I.R.
Body No.
Engine No.
Owner's signature
Address
Town
Date of delivery
Expiration date of guarantee
Stamp and signature of Dealer

DELIVERY CONFIRMATION SLIP

FOR THE ISO RIVOLTA G.T.

Type I.R.
Body No.
Engine No.
Owner's signature
Address
Town -
Date of delivery
Expiration date of guarantee
Stamp and signature of Dealer

USE OF THE FREE SERVICE COUPON

Owners of ISO-Rivolta vehicles are recommended, in their own interests, to avail themselves in good time of our free maintenance service, where expert mechanics will supervise the initial period of use of the vehicle, giving appropriate advice and checking the normal functioning of the various components.

For this purpose, each vehicle is accompanied by a free service booklet which contains a coupon entitling the owner to service and maintenance after 1000, 2500, and 5000 Km (600, 1500 and 3000 miles).

The labor expended in carrying out the above operations is free of charge: only the cost of lubricants will be charged.

If during these operations it is necessary to carry out other works not listed on the coupons, the terms of the guarantee shall be applied, whenever the work is covered by them.

In order to obtain free service, the customer is required to approach the sales agent from whom he obtained the vehicle. It is possible, however, to apply another ISO authorised agent, in the event of change of address or if a long journey would otherwise be involved.

The coupon must be used solely within the period of validity indicated otherwise it is cosidered cancelled. The validity ceases in any case with the expiration of the guarantee.

COUPON No. 1

Miles

Work carried out on

After Km

Stamp and signature

Stamp and signature

of Dealer

After Km

of Dealer

COUPON No. 2

COUPON No. 3

222			
ICO D	IVA	TA	CT
ISO-R	1 4 0	LIA	G.I.

Туре	IR	
Body	No.	

GUARANTEE SERVICE DEPARTMENT

COUPON No. 1

valid after 900 Km - 550 Miles but not after 1200 Km - 700 Miles or 6 months

Date upon which work was c	arried out
Speedometer reading	
Customer's signature	
Stamp and signature of Dealer	

ISO-RIVOLTA G.T.

Туре	IR	
Body	No.	

GUARANTEE SERVICE DEPARTMENT

COUPON No. 2

valid after 2300 Km - 1400 Miles but not after 2600 Km - 1600 Miles or 6 months

Date upon which work was ca	rried out
Speedometer reading	
Customer's signature	
Stamp and signature of Dealer	

ISO-RIVOLTA G.T.

Type IR	
Body No	-

GUARANTEE SERVICE DEPARTMENT

COUPON No. 3

valid after 4800 Km - 2900 Miles but not after 5200 Km - 3100 Miles or 6 months

Date upon which work was	carried out
Speedometer reading	
Customer's signature	
Stamp and signature of Dea	aler
The state of the s	1.7.

Work carried out on

Stamp and signature Work carried out on After Km of Dealer This coupon authorizes carrying out the operations indicated on the following pages under the numbers:

This coupon authorizes carrying out the operations indicated on the following pages under the numbers:

This coupon authorizes carrying out the operations indicated on the following pages under the numbers:

TABLE OF CHECKING, ADJUSTMENT AND MAINTENANCE OPERATIONS DURING THE PERIOD OF SERVICE UNDER GUARANTEE

(up to six months or 10000 Km - 6000 miles)

OPERATIONS			COL	JPO	N EX	PIR	Y
	Description	1	600 Miles 1000 Km.	2	1500 Miles 2500 Km.	3	3000 Miles 5000 Km.
1. 2. 3.	VEHICLE INSPECTION Check condition of tires and inflation Check general condition of the vehicle Vehicle road test (investigating steering, brakes, suspension and accessories; lo- cating any abnormal noises in bodywork and mechanical parts)		×××		0		00 0
	ENGINE						
4. 5.	Checking oil level and topping up Changing engine oil and filter element		×		0		
6.	Adjust valve clearances Adjust fan belt tension		×				
8.	Check radiator water level		×		0		
9.	Check radiator and heater hoses for watertightness		×				
10.	Check and adjust as necessary contact- breaker points		×				
	Check ignition equipment		X				L
	Clean and adjust spark plug electrodes						
13.	Check carburettor and adjust the idling speed		X				
14.	Check the fuel piping for tightness		×				
	Check the operation of the manifold						
	heating valves		×				
							1

OPERATIONS			COU	PO	N EX	PIRY	
	Description	1	600 Miles 1000 Km.	2	1500 Miles 2500 Km.	3	3000 Miles 5000 Km.
16.	Check operation of oil ventilator valve						
	Clean air filter						
18.	Clean petrol filter in tank and replace rear petrol filter paper						
19.	Check the various engine component bolts for tightness		×				
20.	Check tightness of exhaust pipes		×				
	TRANSMISSION						
21.	Check clutch pedal play		×				
	Lubricate clutch control levers						
23.	Check oil level in gearbox and differential		×				
	Change oil in differential						
	Grease joints of transmission shafts Check bolts on differential and transmis-		X		0		
20.	sion shafts for tightness		×				
	SUSPENSION						
27	Check play in wheel bearings		×				П
28.	Change over tyres						
29.	Check rigidity of the wheels		×				
30.	Examine condition of the springs and brake pads		X				n
31.	Check seals on shock absorbers and their						-
-	attachments		×				
32.	Check tightness of bolts on drive shafts Grease spherical joints of the front su-		*				
30.	spension		×		0		
	STEERING						
34.	Check play and tightness of the linkages		×				

OPERATIONS	COUPON EXPIRY			
Description	1 600 Miles 1000 Km. 2	1500 Miles 2500 Km.	3000 Miles 5000 Km.	
35. Check wheel track	X		-	
36. Check oil level in steering box			ш	
BRAKES				
37. Check bedding of pads and discs	X			
38. Check clearance between pads and discs	X			
39. Check hydraulic piping for tightness	×			
40. Bleed hydraulic circuit 41. Check level of brake fluid	X	0		
42. Check servo brake operation	× × × ×	0	H	
43. Check brake pedal play	x			
44. Check efficiency of hand brake	×			
45. Check tightness of bolts on discs and				
levers	×			
ELECTRICAL EQUIPMENT				
46. Check level of electrolyte in battery	×	0		
47. Clean and grease battery terminals	×	· ·	H	
48. Check operation of head and side lights	×	0	F	
and indicator				
49. Check headlamp setting	X			
50. Lubricate horn blower		0		
BODYWORK			1000	
51. Check locks on door, bonnet and boot lid	×			
52. Lubricate hinges and locks	××××		F	
53. Check operation of windows	×			
54. Check operation of heater and ventilator				
55. Check operation of windscreen wipers	×	0		
and screenwashers 56. Check tightness of bolts on bumpers and	X			
number plates				
57. Check level of screen washer liquid	×	0		
FINAL INSPECTION OF VEHICLE				
58. Vehicle and instruments road test	×			